

46HO23-R2522-TR

TracTive recommendations: Spring preload : 17 +8/-2 mm

Rebound damping : 10 clicks Compression LS : 10 clicks Compression HS : 10 clicks

46HO23-R2523-TR

TracTive recommendations: Spring preload : 19 +8/-2 mm

Rebound damping : 10 clicks
Compression LS : 10 clicks
Compression HS : 10 clicks

46HO23-R2524-TR

TracTive recommendations: Spring preload : 17 +8/-2 mm

Rebound damping : 10 clicks Compression LS : 10 clicks Compression HS : 10 clicks

Read more about how to set up the vehicle and how to adjust the adjusters correctly in the TracTive Owner's manual



## Mounting Instructions

Model : HONDA TRANSALP XL750 2023-

: HONDA TRANSALP XL750 (-25) 2023-: HONDA TRANSALP XL750 (+25) 2023-

Part no. : **46HO23-R2522-TR** 

: 46HO23-R2523-TR : 46HO23-R2524-TR

\*Part numbers with TR(XX) suffix only differ in color\*

Instruction:90030354 / A

## Before installing this product, read the TracTive Owner's manual!

TracTive Suspension B.V. cannot be held responsible for any damage to the shock absorber, vehicle, other property or injury to persons, if the instructions for installing and maintenance are not followed exactly.

No guarantee can be given for the performance and reliability if these instructions are not followed

## **HOW TO INSTALL**

1) Put the motorcycle on a work stand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the upper and lower attachments of the original shock absorber and remove it
- 3) Stick the TracTive shock absorber through the linkage swing arm and tighten the upper and lower attachments. Clickers on the left side.
- 4) Mount the preload knob on the bracket and fit it between the exhaust bracket on the right side of the bike.



Make sure that all bolts are tightened to the correct torque.





